

G SERIES USER MANUAL


HO HSING

G40



CONTENTS

1. Safety Precaution
2. Installation
3. Panel instructions
4. Parameter settings

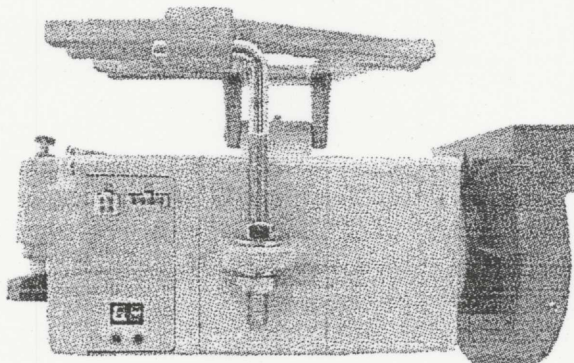

H. S. Global Service Network
 SERVICE HOTLINE : +886-2-2676-5203
 FAX : +886-2-2689-6600, 2689-3657
 E-MAIL: service@hohsing.com.tw
 WEBSITE: http://www.hohsing.com

China Region
 SERVICE HOTLINE : +86-21-64901024
 FAX : +86-21-54570064
 WEBSITE : http://www.hohsing.com



HSVPG1U01-3

2014.11

EC Declaration of Conformity

We hereby declare that the following products:
 AC servo motor-G series
 are in conformity with the provision of the EC directives
 as following :

- EC Low Voltage Directive (2006/95/EC)
 - EC Electromagnetic Compatibility Directive (2004/108/EC)
 - EC Machinery Directive (2006/42/EC)
- Applied harmonized standards:
 EN 60204-31 : Electrical equipment of industrial machines. Particular requirements for sewing machines, sewing units and sewing system.
 EN 292-1 : Safety of machines.
 EN 292-2 : Safety of machines, technical guidelines and specifications.
 EN 61000-6-2 : EMS for industrial environment.
 EN 61000-6-3 : EMI for residential environment.

Declaration of Conformity for Concentration Limits for Certain Hazardous Substances

We hereby declare that the following products:
 AC servo motor- G series
 are complies with the following directives and requirements :

1. European Union RoHS Directive (2002/95/EC) and the concentration limits for certain hazardous substances (2005/618/EC)
2. People's Republic of China Electronic Business Standard : Requirements for concentration limits for certain hazardous substances in electronic information products (SJ/T 11363-2006)

Our product itself (motor, control box) or its packing materials and accessories (box, screws package, user manual, sticker, label, print...etc.) or the suppliers of parts and raw materials are all in conformity with the provision of the European Union RoHS Directive and People's Republic of China Electronic Business Standard to conform the following concentration limits for the six hazardous substances :

Hazardous Substance	Permissible Values
Lead (Pb)	Less than 240 ppm
Mercury (Hg)	Less than 800 ppm
Cadmium (Cd)	Less than 80 ppm
Hexavalent chromium (Cr VI)	Less than 800 ppm
Polybrominated Biphenyl (PBB)	Less than 800 ppm
Polybrominated Diphenyl ether (PBDE)	Less than 800 ppm

- * The concentration of lead in the lead-free process for PCB shall be less than 800 ppm.
- * For packing materials shipped with our products or parts, the hazardous substances shall be 80 ppm or less in sum of Pb+Hg+Cd+Cr VI.

H. S. Machinery. Co., Ltd.

Mr. C. C. Lee
 Plant Manager

1. Safety Precaution :

Please read this manual with sewing machine manual thoroughly and pay attention for the following safety precaution.

- Installation and operation must be done by the trained personnel, also turn off the power switch and remove the plug from outlet and wait for 5 minutes before any installation.
- This product is designed for the specific sewing machines and must not be used for other purposes.
- Only use the power voltage as described on the name plate of the motor and control box in $\pm 10\%$ ranges.

⚡ Attention : If the control box is AC 220V system, please don't connect to the AC 380V power outlet, otherwise the error will occur and motor is not functional. If that happened, please turn off the power switch immediately and check the power voltage. Continue supply the 380V power over 5 minutes might damage the fuses and burst the electrolytic capacitors and even might endanger the person safety.



- In order to prevent abnormal operation, keep the product away from the high frequency machines.
- Don't operate in direct sun light - outdoors area and the room temperature is 45°C above or 5°C under.
- Don't operate near the heater - dew area and the humidity is 30 % less or 95% more.
- Don't operate in dusty - evaporate - combustible gas area, and stay away from corrosive material.
- Don't apply heavy objects or excessive force on the power cord, also don't bend or pull the power cord.
- Power cord must keep 3 cm or above distance away from the V-belt and the pulley.
- In order to prevent the static interference and current leakage, all grounding works must be done properly.
- After power on the machine for the first time, use low speed to operate and check the correct rotation direction.
- During machine operation, don't touch any moving parts.
- All moving parts must have protective device to avoid the body contact and objects insertion.
- Maintenance and repair must be done by the properly trained technician, also all the spare parts for repair must be approved or supplied by the manufacturer.
- Don't use any objects or force to hit or ram the product.

Danger and caution signs



Risks that may cause personal injury or risk to the machine are marked with this symbol in the instruction manual.



This symbol indicates electrical risks and warnings.

Limited Warranty

Warranty period of this product is 1 year from purchasing, or 18 months from our manufacturing date.


Warranty Detail

Any trouble found within warranty period under normal use condition in conformance with this manual, it will be repaired free of charge. Repair will be chargeable in the following cases even if within warranty period :

1. Inappropriate use include: wrong connecting high voltage, wrong application, disassemble, repair, modification by incompetent personnel, or operate the product without the precaution, or operate the products out of its specification range. Insert odd objects or liquids into the product.
2. Damage by fire, Earth quake, lighting, wind, flood, salt corrosive, moisture, abnormal power voltage and any other damage cause by the natural disaster or by the inappropriate environments.
3. Dropping after purchase, or damage in transportation by customer himself. (or by customer's shipping agency)

Note : We put our best effort and mind in testing and manufacturing for assuring the quality and reliable of this product. But it is possible this product can still be damaged due to external magnetic interference and electronic static or noise or unstable power source more than expected; therefore the grounding system of operate area must be well-connected to this product and it's also recommended to install a failsafe device.

3. Panel instructions

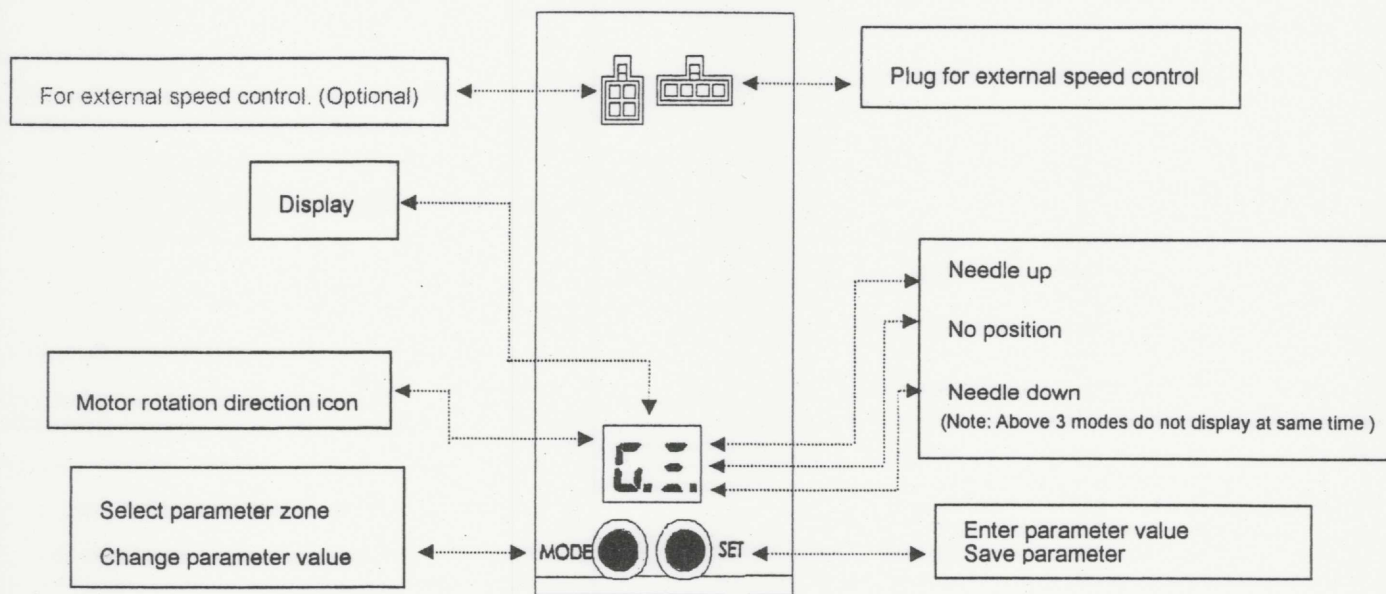

3.1. Changing the motor rotation

- While pressing the Mode button turn the power to the motor on.
- Continue pressing the Mode button until either "C" or "CC" is displayed in the window.
- Release the Mode button.
- By pressing the Mode button again the motor direction indicator will change from "C" to "CC" or from "CC" to "C" depending on the motors rotation when the power was turned on.
- Then press the Save button to save the setting.

3.2. Setting the needle up or down position

- While pressing the Set button turn the power on.
- Continue pressing the Set button until either "Up" or "Down" is displayed in the window.
- By pressing the Mode button again the display window will change from "U" (up) to "D" (down) or from "D" to "U" depending on the needles position when the power was turned on.
- Then press the Save button to save the setting.

3.3. Setting the machine code (if applicable)

- Turn on the power switch without touching any other buttons.
- When the Set button is depressed once the display window will show "A0".
- Then press the Mode button and hold it to until A-E shows in the display window.
- Then press the Set button until the proper digit is displayed in the window for the type of machine required. See section 4 for the available settings.

3.4. Changing the parameters

- Turn on the power switch without touching any other buttons.
- When the Mode button is depressed once the display will show "P0". Each time it is pressed again it will display the parameter code for the next parameter listed in the "Parameter Setting" in section 4.
- Press the Mode button until the parameter you want to change is displayed.
- Press the "Set" button to enter the editing function.
- Press the "Mode" button to increase the value of the parameter you are editing. If you missed your setting keep pressing the "Mode" button until the value you are looking for is displayed.
- Press the "Set" button again to save the value you selected.

4. Parameter settings


Parameter NO.	Function Name	Range	Value	Lockstitch	Twin needle	High Post	Over lock	Cover stitch
P0	Maximum sewing speed	1~65	*100spm	40	20	15	60	38
P1	Low speed	10~50	*10spm	23	23	23	23	23
P2	Motor pulley dimension	50~G0	*1m/m 50 ~ 160	90	75	65	90	A0
P3	Machine pulley dimension	50~G0		75	80	70	55	65
P4	Pulley's ratio setting mode selection	ON/OFF	ON: Use P2&P3 to calculate the ratio OFF: Automatic calculation	OFF	OFF	OFF	OFF	OFF
P5	Sewing speed	-----	-----	---	---	---	---	---
P6	Needle up position	0 ~ 35	*10°	0	0	0	0	0
P7	Virtual down position for synchronizers with one positioning Disc	9~30	*10°	18	18	18	18	18
P8	Future use	ON/OFF	ON: Valid OFF: Invalid	OFF	OFF	OFF	OFF	OFF
P9	Future use	L/H	L:LOW H:HIGH	L	L	L	L	L
PA	Slow start operation mode	ON/OFF	ON: Valid OFF: Invalid	OFF	OFF	OFF	OFF	OFF
PB	Soft start speed	10~50	*10spm	20	20	20	20	20
PC	Stitch numbers for soft start	1~9	*1 Stitch	2	2	2	2	2
PD	Soft start at the first cycle of power ON	ON/OFF	ON: Slow speed at first stitch OFF: Refer to P7	OFF	OFF	OFF	OFF	OFF
PE	Motor braked at normal stop	ON/OFF	ON: Locked OFF: Unlocked	OFF	OFF	OFF	OFF	OFF
PF	Weak braking torque scale	0.1~5.0	Ampere value	2.0	2.0	2.0	2.0	2.0
PE	Acceleration time	10~50	*10ms	30	30	30	30	40
PH	Deceleration time	10~50	*10ms	26	26	30	26	26
PI	Reverse after pedal heel down	ON/OFF	ON: Valid OFF: Invalid	OFF	OFF	OFF	OFF	OFF
PJ	Setting of reversing angle	10~30	*10°	18	18	18	18	18
PK	Needle up after pedal heel down	ON/OFF	ON: Valid OFF: Invalid	OFF	OFF	OFF	OFF	OFF
PL	One stitch on way of sewing	ON/OFF	ON: Valid OFF: Invalid	OFF	OFF	OFF	OFF	OFF
PM	Half stitch at first stitch after needle up	ON/OFF	ON: Valid OFF: Invalid	OFF	OFF	OFF	OFF	OFF
PZ	Select machine code	A0 ~ E9	-----	A0	B0	C0	D0	E0
FL	Recovery to factory setting	Y/N	Y: Recover factory presetting N:-----	---	---	---	---	---
FS	Save factory setting	Y/N	Y: Saves factory presetting N:-----	---	---	---	---	---

over lock


2. Installation :

a). Install the motor under the table.

G installation

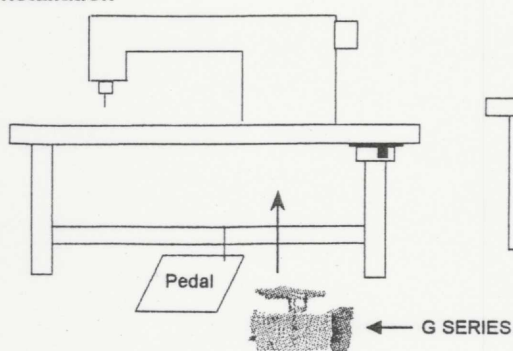


c). Install the V-Belt on the motor and machine pulley, then adjust the belt to its appropriate tension.

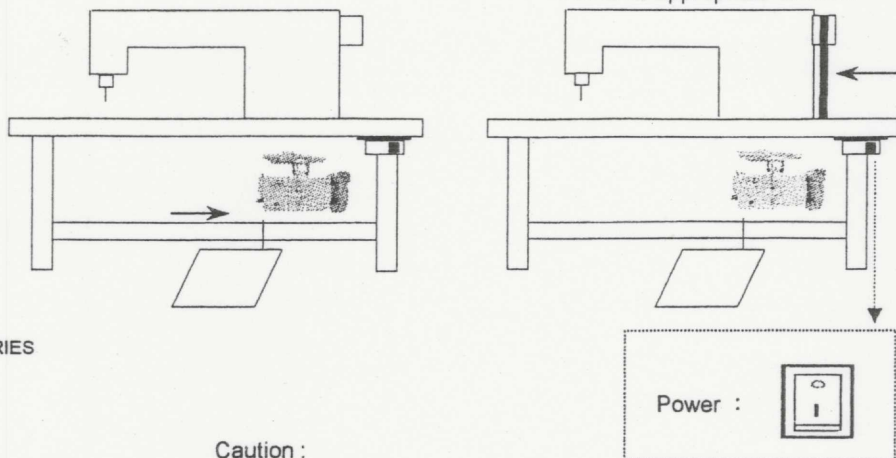

Caution :

For your personal safety, turn of the power switch and remove the power plug from outlet before making any adjustment.

Synchronizer installation

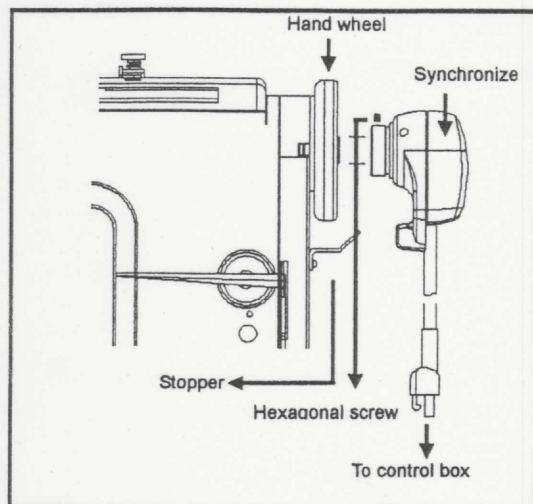


Mounting the Synchronizer onto the flange of hand wheel and match the stop groove of the synchronizer with the stopper of the machine head then tighten and secure 2 hexagonal screws of the synchronizer rotor, then connect the synchronizer cable to the control box.

Note : Stopper type and location might be varied, depend by the machine model.

Synchronizer Adjustment (Please open the top cover first)

Needle up position : Rotate the machine pulley to reach mechanical needle up position and turn the photo disc (A) until its red mark is aligned with the red mark on the bearing cover plate.

Note: Instruction above is the standard adjustment. If you feel the position wasn't accurate, please do the fine tuning by yourself.

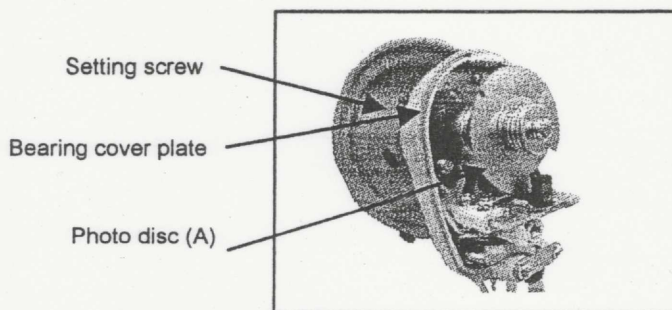

Speed control unit adjustment



Caution :

For person safety, turn off the power switch and remove the power plug from outlet before any adjustment.

Components of speed control unit

- A : Spring to control the force of the forward movement of the treadle.
- B : Adjusting bolt for heel backpressure.
- C : Treadle arm.
- D : Treadle pitman rod.

	Adjustment Type	Adjustment	Result
1	Force required to push the treadle down	Move "spring A" to the right.	Force required to push the treadle down is increased
		Move "spring A" to the left.	Force required to push the treadle down is decreased
2	Force required to heel back on the treadle	Turn bolt "B" counter clockwise.	Force required to heel back is increased.
		Turn bolt "B" clockwise.	Force required to heel back is decreased.
3	Treadle stroke adjustment	Move the pitman rod "D" to the right.	The treadle stroke is increased.
		Move the pitman rod "D" to the left.	The treadle stroke is decreased.

